


Simeon Audita

GETTING STARTED GUIDE

Audita is available in **Digital** wireless and in **FM** versions. Check which Audita version you have on the device itself.


Every Audita is shipped with batteries fully charged. The transmitters and receiver are already paired and channels pre-assigned. Your Audita is all ready to turn on and use straight out of the box!

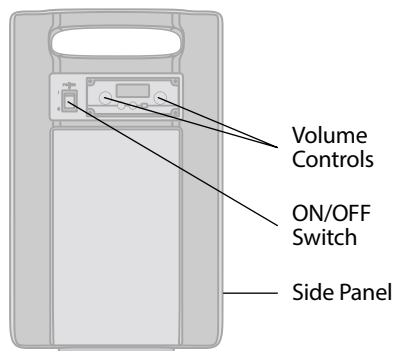

- The main controls for Audita are on the front of the wireless speaker. These are all you need to use your system.
- Switch the speaker ON and turn the two volume controls to a moderate setting. These will control the level of each microphone.
- There are special controls and a charging jack on the side panel. External devices can be connected at the side panel too.

Audita Wireless Speaker

Accessory microphones may be plugged into the jack here

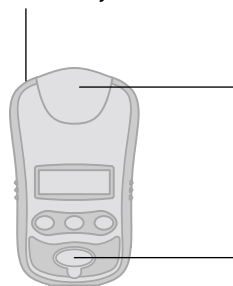

Built-in microphone works best about 20cm from your mouth.

Press and hold for ON/OFF
Press quickly to MUTE (red light) and UNMUTE (blue light)

Pendant Transmitter



Press quickly to MUTE (red light) and UNMUTE (blue light) the switch on back of microphone

Press and Hold for ON/OFF

Handheld Pass-around Microphone / Transmitter

PRODUCT SUPPORT: